

Easy-Wash Stick

INSTRUCTIONS

Assembly

Screw brush into wash handle.

Make sure yellow fitting on handle faces back.

If not, fitting may touch surface being washed and damage may occur.

Washing Instructions

Mix cleaning solution per manufacturer's directions.

Bucket needs to be large enough to submerge entire wash brush.

Note: Spray surface to be cleaned with water to remove excess dirt and debris.

Submerge entire brush into cleaning solution. Pull back inner handle to draw solution into clear tube.

Push in handle to feed cleaning solution to the brush as needed. When brush is in down position it will self feed. Refill when empty.

Cleaning

Fill bucket with clean water and flush by moving inner handle back and forth several times.



Make sure brush is thoroughly cleaned. If needed, rinse with garden hose. Brush should be free of dirt and debris to prevent scratching surface.

Note: Do not store in areas reaching high temperatures or in direct sunlight.

If inner handle becomes difficult to pull back, lubricate o-rings by removing brush and placing a few drops of liquid dish soap into opening. Pull handle back and forth several times to distribute.

Not for use with harsh cleaning chemicals or solvents.

Do not use with flammable materials.

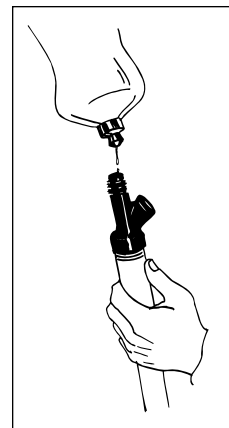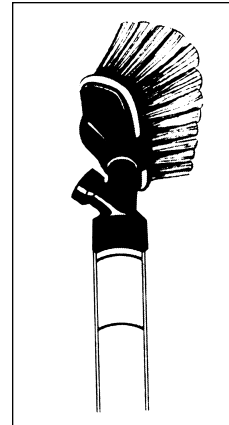

ONE YEAR LIMITED WARRANTY

HOMERIGHT warrants this product for one year following date of purchase against any defects in material or workmanship. Any product believed defective within the warranty period should be returned postage-paid with proof of purchase to HomeRight, 1661 94th Lane N.E., Minneapolis, MN 55449-4324, Attention: Service Department.

HOMERIGHT will repair or replace defective product at no charge, and return postage-paid to you. Your name, address, and a description of problem should be included in the box. This warranty does not cover accessories or damage resulting from improper use, negligence, accidents or normal wear and tear.

ANY IMPLIED WARRANTY OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE IS LIMITED TO ONE YEAR FOLLOWING DATE OF PURCHASE.

RESPONSIBILITY IS LIMITED TO THE REPAIR OR REPLACEMENT FOR DEFECTS IN MATERIAL OR WORKMANSHIP. HOMERIGHT SHALL NOT IN ANY EVENT BE LIABLE FOR ANY INCIDENTAL OR CONSEQUENTIAL DAMAGES OF ANY KIND, WHETHER FOR BREACH OF THE WARRANTY OR ANY OTHER REASON.

Some states do not allow a limitation on how long implied warranties last or the exclusion of incidental or consequential damages, so the above limitation and exclusion may not apply to you.

This warranty gives you specific legal rights, and you may also have other rights which vary from state to state.

If you cannot obtain parts and accessories at your local retail dealer, then call or write: HomeRight, 1661 94th Lane N.E., Minneapolis, Minnesota 55449-4324, Phone (763) 780-5115 or 1-800-264-5442, 8:00 a.m. to 5:00 p.m. CST.



1661 94th Lane N.E., Minneapolis, MN 55449
1-800-264-5442 • (763) 780-5115
www.homeright.com

PN C820328 Rev. A 10/02