

How to Use the Rapid Clean

To ensure repeated, reliable performance, you should clean your paint sprayer after each use. The Rapid Clean functions by quickly and effectively flushing your paint sprayer with water to remove any leftover or dried paint.

Weight:

5 lb

Dimensions:

14 × 5 × 18 in

<https://store.wagnerspraytech.com/store/wagner/buy/productID.5254539000/ThemeID....> [1]

Source URL: <https://www.homeright.com/how-to-video/how-to-use-the-rapid-clean>

Links:

[1] <https://store.wagnerspraytech.com/store/wagner/buy/productID.5254539000/ThemeID.4878548000>